


Communication tool user manual

1. GUI

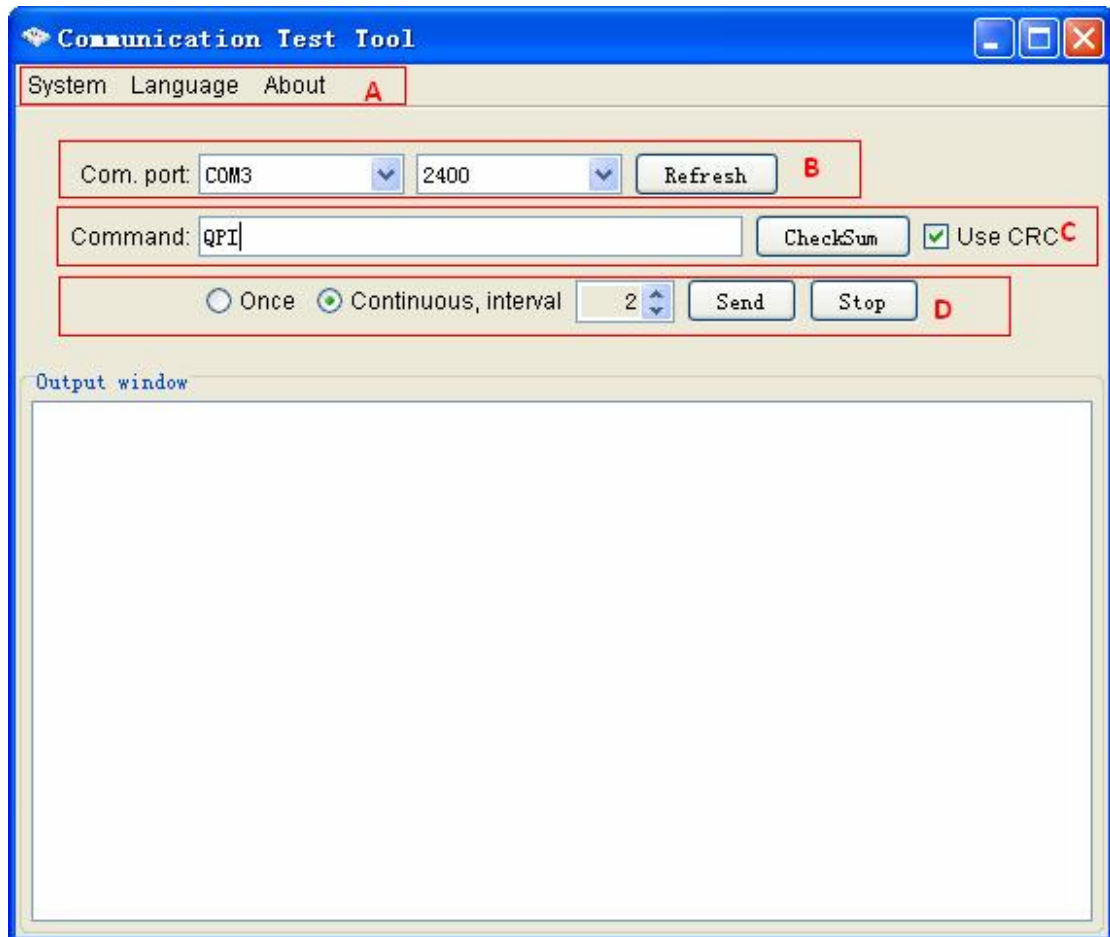

A: Menu;

B: COM. Port and Baud rate setting;

C: Command input;

D: Send type;

E: Output window;